



Alu-Bast Direct


The Alu-Bast Direct collection by ONE A is a modular system, which can be assembled in various constellations.

The collection consists of three main components, respectively in aluminium and alabaster, available in different lengths.


TUBE



ALUBASTER

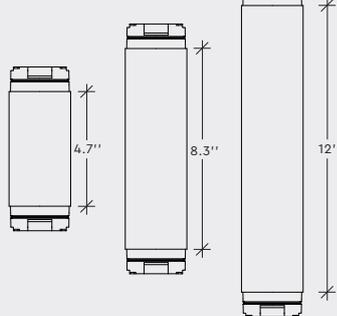

TUBE - with downlight

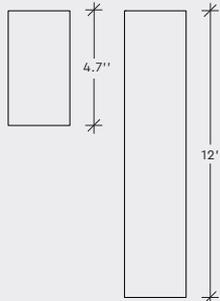

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.



ALU-BAST DIRECT CC - PENDANT

DATA

| | |
|-------------|--|
| Collection | ONE A |
| Product | ALU-BAST DIRECT |
| Article no. | 1N13.5392.xx73 (Tube 300/120, Alubaster 120) 1N13.5393.xx73 (Tube 300/120, Alubaster 210) 1N13.5394.xx73 (Tube 300/120, Alubaster 300) 1N13.5492.xx73 (Tube 300/300, Alubaster 120) 1N13.5493.xx73 (Tube 300/300, Alubaster 210) 1N13.5494.xx73 (Tube 300/300, Alubaster 300) |

SPECIFICATIONS

| | |
|---------------------|--|
| Weight | 4.27lb - 6.61lb |
| Material | Aluminium, Alabaster |
| Supply | Constant Current 10W 34V 300mA (light source included) |
| IP protection grade | IP20 |
| CCT | 2700K (Due to alabast - variations will occur) |
| Lumen | Alubaster: 209-237lm Downlight: 489lm |
| Efficiency | Alubaster: 39-44lm/W Downlight: 91lm/W |

| | |
|------------------------|---|
| IES/LDT | For IES/LDT lux files review STORM SYSTEM® - LUX FILES ➤ |
| CRI | 90+ |
| Dimmable | Triac dimmable |
| Lifespan | >40.000Hrs |
| Labelling | ETL PENDING |
| Insulation class | Class III |
| Energy Classifications | ONE A 1N13.5x9x.xx73 10W kWh/1000h 2019/2015 |

DRIVER

This product shall always be powered by SELV LED driver, output voltage of this driver in open circuit must not exceed 60V.

For further support contact LITES ON WEST
245 West 29th Street, 6th floor | NY, NY 10001
T: 212 775 6363 | F: 212 775 0355
E: info@litesonwest.com

XX - COLOUR CODES

| | |
|---|------------------|
| 01 - White | 92 - Black Pearl |
| 53 - Elephant Grey <i>cross-brushed</i> | 97 - Gold |
| 58 - Silver <i>cross-brushed</i> | 99 - Bronze |

NOTE

9.84 ft cord included.

Due to pendant weight, some AluBast pendants are delivered including a metal wire. The metal wire can be fixed to Storm Output - see technical info for more information

ONE A reserves the rights to change and/or update product information and accepts no liability for any printing errors.
last updated 29 - 11 - 2021



IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

CLEANING AND MAINTENANCE:


Use a soft moist cloth for cleaning. No further maintenance is required.

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

COMPONENTS

- AluBast Direct
 - wire
 - light source
 - allen key

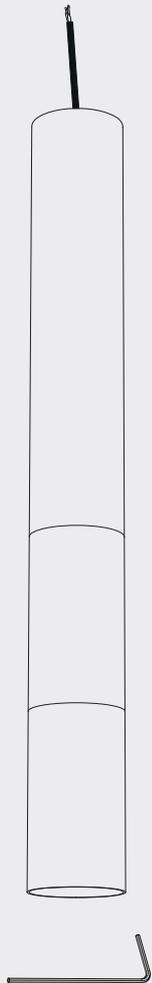

ALU-BAST DIRECT PENDANT



ASSEMBLY INSTRUCTION page 1 of 4

STEP 1

Make sure main power is off!

Connect the cables

BE ATTENTIVE! Make sure you have connected the power correctly, please refer to Storm Output assembly instructions or other outlet

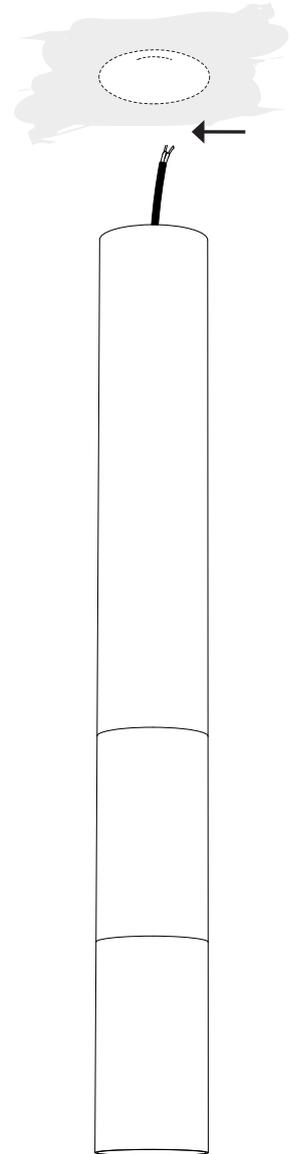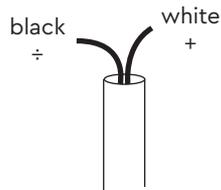

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

ALU-BAST DIRECT PENDANT

ASSEMBLY INSTRUCTION page 2 of 4


INSTRUCTIONS TO CHANGE LIGHT SOURCE

STEP 1

To remove Alabaster Part:

1. With the accompanying allen key turn the screw clockwise until the Alabaster part can rotate
2. Take hold of the Alabaster part, then gently pull down, whilst slightly rotating


NOTE: When rotating the fixture choose the direction with the least resistance.

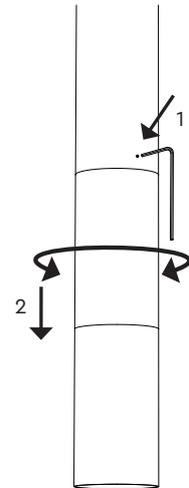

STEP 2

1. Turn the 3 screws anti-clockwise using the allen key.
2. Remove the retaining ring using light pressure.


Then replace the light source, reattach the retaining ring, make sure it snaps. Finally, fasten the 3 screws, so that they are flush with the fixture ring.

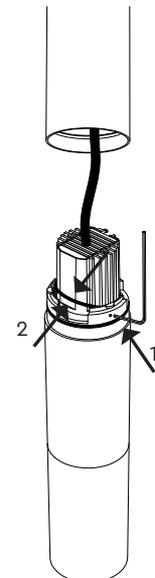

STEP 3

1. Remount the Alabaster part in the Tube, by gently rotating until the allen screw aligns with the hole in the Tube.
2. Secure the Alabaster part in place by turning the screw anti-clockwise until the screw is flush with the tube.

NOTE: When rotating the fixture choose the direction with the least resistance.

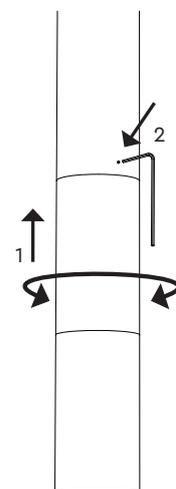

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

WARRANTY:

 
If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

ALU-BAST DIRECT PENDANT

ASSEMBLY INSTRUCTION page 3 of 4

STEP 4


Lightly push in the honeycomb, thereby creating space to take hold of the Direct fixturing, then gently pull down.



STEP 5

Remove the retaining ring using light pressure and replace the light source. Reattach the retaining ring, make sure it snaps. Then remount the Direct in the Tube, by slightly rotating the Direct into place.

 NOTE: When rotating the fixture choose the direction with the least resistance.




ALU-BAST DIRECT PENDANT

ASSEMBLY INSTRUCTION page 4 of 4

Suspension wire can be mounted in Storm Output, for further information refer to Storm Output's technical information.


Feed the accompanying steel wire through the small hole in Storm Output, then fasten the screw

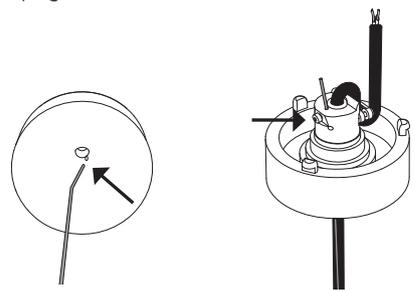

WIRE SUSPENSION ASSEMBLY INSTRUCTION


STEP 1

Mount the wire suspension to the ceiling with a screw.

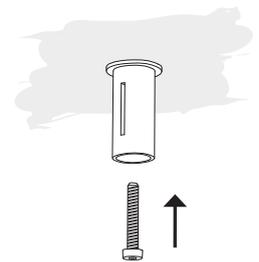


STEP 2

Mount the wire lock in the wire suspension.

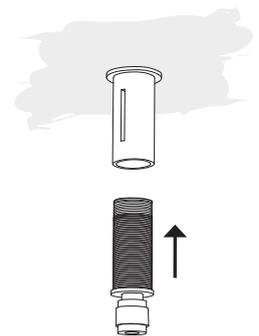


STEP 3

Guide the wire through the wire lock

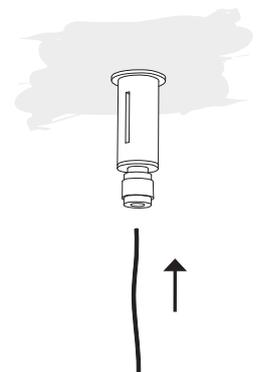

STEP 4

Then pull the wire out through the slot

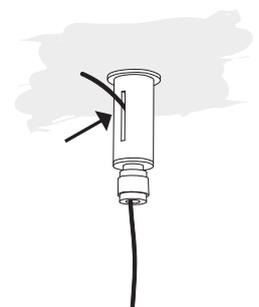

IMPORTANT INFORMATION

Disassembly must be performed by a certified electrician only, and instructions must be followed.

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

ALU-BAST DIRECT PENDANT

DISASSEMBLY INSTRUCTION

STEP 1

Make sure main power is off!
Disconnect the cables

Please refer to Storm Output assembly instructions or other outlet

