

# ALU-BAST DIRECT CC – SURFACE



## Alu-Bast Direct


The Alu-Bast Direct collection by ONE A is a modular system, which can be assembled in various constellations.

The collection consists of three main components, respectively in aluminium and alabaster, available in different lengths.


### TUBE



### ALUBASTER

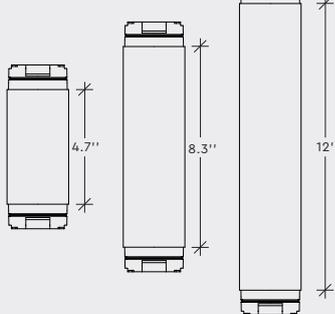

### TUBE - with downlight

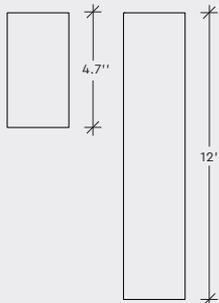

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.

## DATA

Collection	ONE A
Product	ALU-BAST DIRECT
Article no.	1N13.5592.xx73 (Tube 300/120, Alubaster 120) 1N13.5593.xx73 (Tube 300/120, Alubaster 210) 1N13.5594.xx73 (Tube 300/120, Alubaster 300) 1N13.5692.xx73 (Tube 300/300, Alubaster 120) 1N13.5693.xx73 (Tube 300/300, Alubaster 210) 1N13.5694.xx73 (Tube 300/300, Alubaster 300)

## SPECIFICATIONS

Weight	4.27lb – 6.61lb
Material	Aluminium, Alabaster
Supply	Constant Current 10W   34V   300mA (light source included)
IP protection grade	IP20
CCT	2700K (Due to alabast – variations will occur)
Lumen	Alubaster: 209–237lm Downlight: 489lm
Efficiency	Alubaster: 39–44lm/W Downlight: 91lm/W

IES/LDT	For IES/LDT lux files review STORM SYSTEM® – LUX FILES ➤
CRI	90+
Dimmable	Triac dimmable
Lifespan	>40.000Hrs
Labelling	ETL PENDING
Insulation class	Class III
Energy Classifications	Class III



ONE A  
1N13.5x9x.xx73



## DRIVER

This product shall always be powered by SELV LED driver, output voltage of this driver in open circuit must not exceed 60V.

For further support contact LITES ON WEST  
245 West 29th Street, 6th floor | NY, NY 10001  
T: 212 775 6363 | F: 212 775 0355  
E: [info@litesonwest.com](mailto:info@litesonwest.com)

## XX – COLOUR CODES

	01 – White		92 – Black Pearl
	53 – Elephant Grey <i>cross-brushed</i>		97 – Gold
	58 – Silver <i>cross-brushed</i>		99 – Bronze

### IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

### CLEANING AND MAINTENANCE:

 
Use a soft moist cloth for cleaning. No further maintenance is required.

### WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

### COMPONENTS

- AluBast Direct
- light source




# ALU-BAST DIRECT SURFACE

## ASSEMBLY INSTRUCTION page 1 of 3

### STEP 1

Mount the fixture onto the ceiling, by placing the Base over the screws and slightly rotating, then tighten the screws.


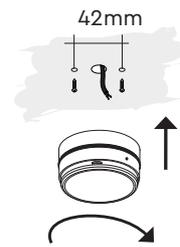


### STEP 2

**Make sure main power is off!**

Connect the wires.

**BE ATTENTIVE!** Make sure you have connected the power correctly, please refer to Storm Output assembly instructions or other outlet

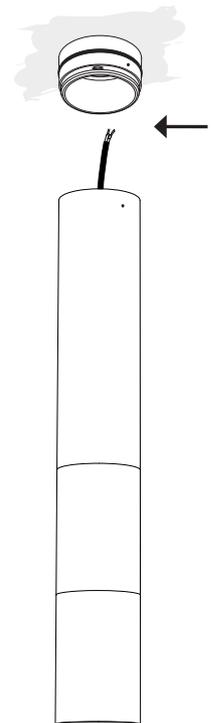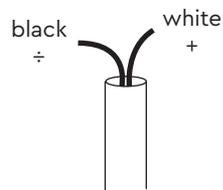


### STEP 3

Mount the Tube onto the Base, by gently rotating until the allen screw aligns with the hole in the tube.

To secure the tube in place, turn the allen screw anti-clockwise until the screw is flush with the tube.

**NOTE:** When rotating the fixture choose the direction with the least resistance.

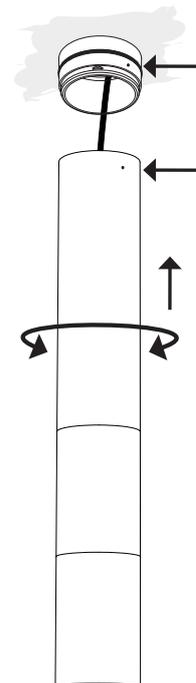

#### IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

#### CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

#### WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

# ALU-BAST DIRECT SURFACE

ASSEMBLY INSTRUCTION page 2 of 3

## INSTRUCTIONS TO CHANGE LIGHT SOURCE


### STEP 1

#### **Make sure main power is off!**

To remove Alabaster Part:

1. With the accompanying allen key turn the screw clockwise until the Alabaster part can rotate
2. Take hold of the Alabaster part, then gently pull down, whilst slightly rotating


NOTE: When rotating the fixture choose the direction with the least resistance.

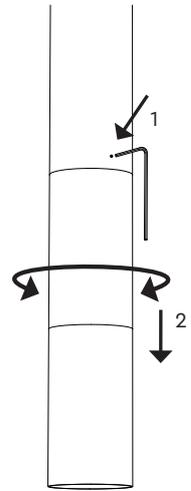

### STEP 2

1. Turn the 3 screws anti-clockwise using the allen key.
2. Remove the retaining ring using light pressure.


Then replace the light source, reattach the retaining ring, make sure it snaps. Finally, fasten the 3 screws, so that they are flush with the fixture ring.

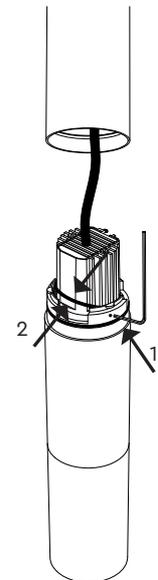

### STEP 3

1. Remount the Alabaster part in the Tube, by gently rotating until the allen screw aligns with the hole in the Tube.
2. Secure the Alabaster part in place by turning the screw anti-clockwise until the screw is flush with the tube.

NOTE: When rotating the fixture choose the direction with the least resistance.

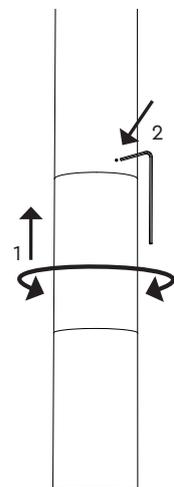

#### IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

#### CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

#### WARRANTY:

 
If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

## ALU-BAST DIRECT SURFACE

### ASSEMBLY INSTRUCTION page 3 of 3

#### STEP 1


Lightly push in the honeycomb, thereby creating space to take hold of the Direct fixturing, then gently pull down.



#### STEP 5

Remove the retaining ring using light pressure and replace the light source. Reattach the retaining ring, make sure it snaps. Then remount the Direct in the Tube, by slightly rotating the Direct into place.

 NOTE: When rotating the fixture choose the direction with the least resistance.



#### IMPORTANT INFORMATION

Disassembly must be performed by a certified electrician only, and instructions must be followed.

#### WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

## ALU-BAST DIRECT SURFACE


### DISASSEMBLY INSTRUCTION

#### STEP 1

To dismantle:

1. Turn the screw clockwise with the accompanying allen key, until the tube is able to rotate.
2. Then gently pull down on the Tube, whilst slightly rotating.


NOTE: When rotating the fixture choose the direction with the least resistance.

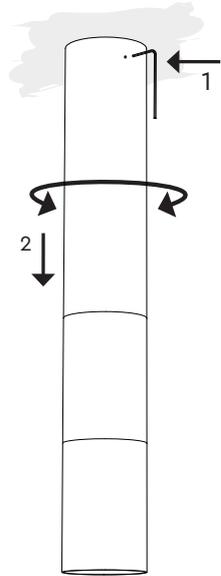

#### STEP 2

**Make sure main power is off!**

Disconnect the wires.

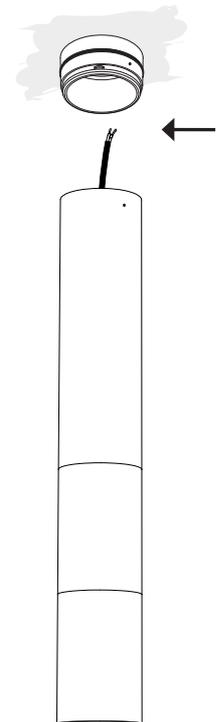

#### STEP 3

Loosen the screws, then slightly rotate and gently pull down.

